

162-1



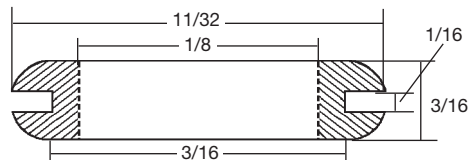
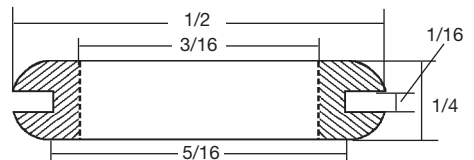
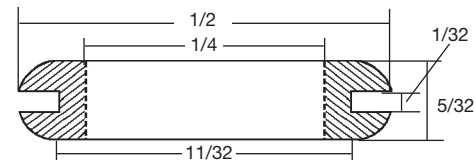
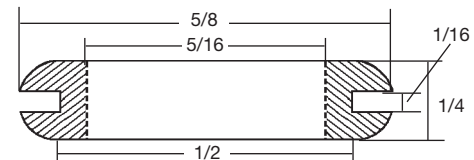
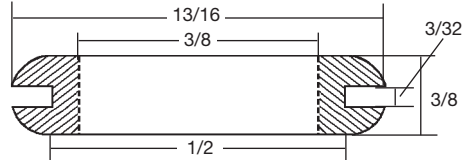
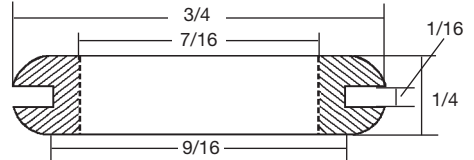
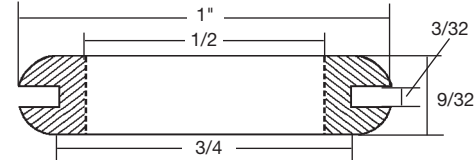
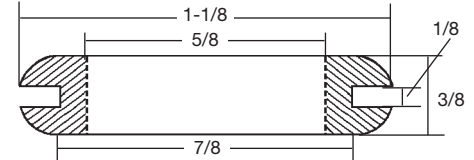
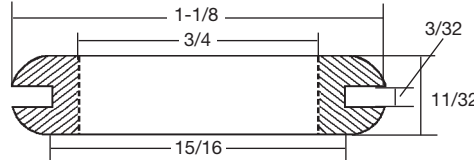
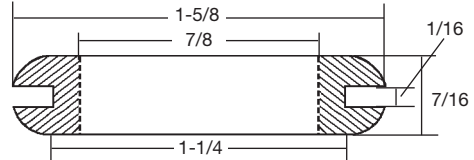
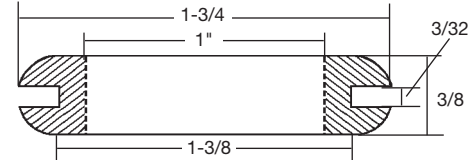
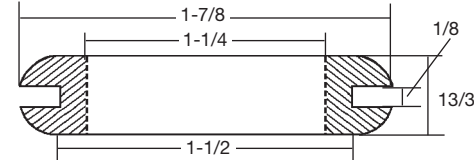
ORDER TOLL-FREE: 1-800-558-2808
www.imperialsupplies.com

FIREWALL GROMMETS

BACK OF CABINET

© 2012 Imperial Supplies LLC

IMAGES NOT ACTUAL SIZE

9070 For Hole 3/16" Diameter  907025  GROMMET 1/8 ID	9071 For Hole 5/16" Diameter  907125  GROMMET 3/16 ID	9072 For Hole 11/32" Diameter  907225  GROMMET 1/4 ID	9073 For Hole 1/2" Diameter  907325  GROMMET 5/16 ID
9074 For Hole 1/2" Diameter  907425  GROMMET 3/8 ID	9075 For Hole 9/16" Diameter  907525  GROMMET 7/16 ID	9076 For Hole 3/4" Diameter  907625  GROMMET 1/2 ID	9077 For Hole 7/8" Diameter  907725  GROMMET 5/8 ID
9078 For Hole 15/16" Diameter  907825  GROMMET 3/4 ID	9079 For Hole 1-1/4" Diameter  907925  GROMMET 7/8 ID	9080 For Hole 1-3/8" Diameter  908025  GROMMET 1" ID	9081 For Hole 1-1/2" Diameter  908125  GROMMET 1-1/4 ID

FRONT OF CABINET



BACKSHEET STATES REORDER QUANTITIES