

230-1



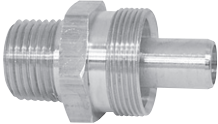
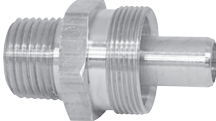

ORDER TOLL-FREE: 1-800-558-2808
www.imperialsupplies.com

RUBBER AIR BRAKE FITTINGS

BACK OF CABINET

© 2012 Imperial Supplies LLC

IMAGES NOT ACTUAL SIZE

90517-1 AIR HOSE NUT for 3/8 hose size WH 33806D  90517-1  A/H NUT SPR 33806D 3/8	90518 SPRING GUARD for 3/8 hose size WH 33806-C  90518  A/H SPR GRD 33806-C 3/8	90510 NUT FOR HOSE CONNECTOR for 3/8 hose size WH 33806B  90510  A/H NUT 33806B 3/8	90511 HOSE CONNECTOR SLEEVE for 3/8 hose size WH 33806A  90511  A/H CON SLV 33806A 3/8
90522 INSERT 3/8 hose 1/4 male NPT WH 1391 x 6  90522  A/H INSERT 1391X6 3/8 X 1/4	90523 INSERT 3/8 hose 3/8 male NPT WH 1391 x 6 x 6  90523  A/H INSERT 1391X6X6 3/8 X 3/8	90524 INSERT 3/8 hose 1/2 male NPT WH 1391 x 6 x 8  90524  A/H INSERT 1391X6X8 3/8 X 1/2	
90512 HOSE CONNECTOR 3/8 hose 1/4 male NPT WH 33806B-Y24  90512  A/H CON 33806B-Y24 3/8 X 1/4	90513 HOSE CONNECTOR 3/8 hose 3/8 male NPT WH 33806B-Y26  90513  A/H CON 33806B-Y26 3/8 X 3/8	90514 HOSE CONNECTOR 3/8 hose 1/2 male NPT WH 33806B-Y28  90514  A/H CON 33806B-Y28 3/8 X 1/2	
90521 HOSE CONNECTOR WITH ADAPTER 3/8 hose 1/4 male NPT WH 33806B-Y84  90521  A/H CONN ADAPTER 33806B-Y84 3/8 X 1/4	90520 ADAPTER 1/4 male NPT WH 1390 x 6  90520  A/H ADAPTER 1390X6 1/4 X 3/4-20		90438 HOSE MENDER 3/8 x 3/8 WH 33806B-Y06  90438  HOSE MENDOR 33806B-Y06 3/8 X 3/8

FRONT OF CABINET



BACKSHEET STATES REORDER QUANTITIES